


Fitting Instructions #TRC1007IS

Toyota 86 ZN6 (2012-On)

Adjustable Toe Control Arm (Rear)

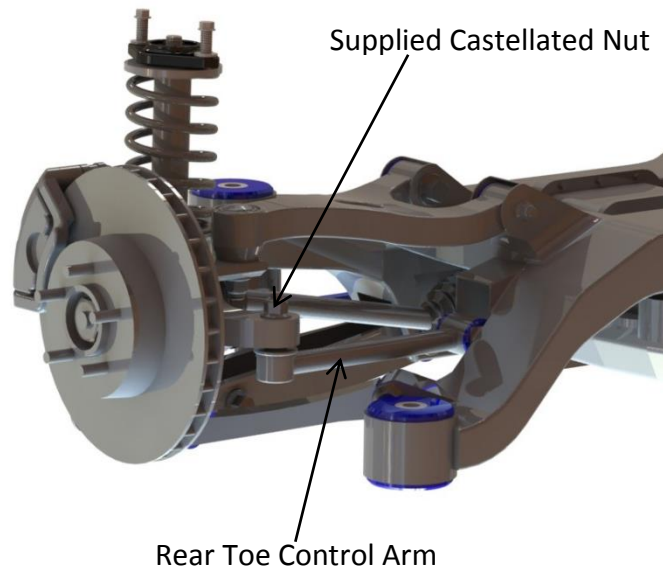

Note: SuperPro Toe Control Arm must be fitted to both sides of the vehicle.

- Before starting the job, check and replace any loose or worn part;
- With the vehicle on jack stands/hoist, remove the O.E. rear toe control arms;
- Clean chassis areas to remove any old original bushing materials. Using the supplied grease, liberally coat the bush flanges which will later be in contact with the chassis housing;
- Install the new control arm to the vehicle. **Note:** Except for the fastener on the outer position (hub), reuse all other OE fasteners and tighten. Then, install the rod end into the hub and use the supplied castellated nut to tighten up the rod end.
- Take the vehicle to the wheel aligner and adjust the toe control arm to the desired length by removing the rod end from the hub and then, turn it in or out (according to the settings).
- When all the settings are defined, tighten the locking nut and torque all fasteners to manufacturer's specification.