

# General Fitting Instructions

# Selbys

SWAYBARS by WHITELINE

These performance low compliance sway bar link kits are designed to replace the high compliance original equipment versions on Impreza, Liberty (Legacy) and WRX. Both kits (KLC20 for front and KLC19 for rear) utilise a high tensile spring steel link fitted with ultra low compliance polyurethane bushes. Critical hardware is replaced with high tensile components to match the higher loads.


The result is much more precise and direct roll control with up to 20% more effective bar rate available at lower wheel deflection points. This does NOT mean an outright increase in your bar rate but rather a quickening of its effect allowing more bar rate earlier.

To fit, first raise and support the vehicle on a level surface with the wheels at normal ride height. *That is, DO NOT raise the body alone.* Then replace the original links and hardware with the new components supplied in the kit as per the drawings below.

Do not tighten fittings until all components are properly installed and checked. Recheck and tighten all fittings after initial 500kms.

## KLC20

### Illustration

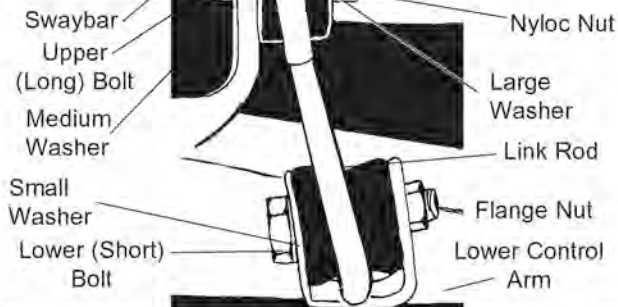

## KLC19

### Illustration

